



*When the door opening angle is 75°,
you can choose the load capacity as below:*

Síla podnošníka Load capacity (N)	Door height (mm) Door weight (kg)			
	300	400	500	600
60	2.0	1.5	1.2	1.0
80	2.7	2.0	1.6	1.4
100	3.4	2.6	2.0	1.7
120	4.1	3.1	2.5	2.0
150	4.7	3.5	2.9	2.4

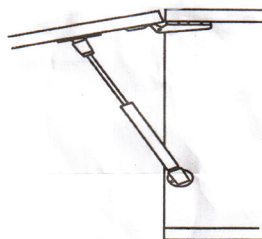


*When the door opening angle is 90°,
you can choose the load capacity as below:*

Load capacity (N)	Door height (mm) Door weight (kg)			
	300	400	500	600
60	1.8	1.3	1.1	0.9
80	2.4	1.8	1.4	1.2
100	3.0	2.2	1.8	1.5
120	3.6	2.7	2.1	1.8
150	4.1	3.2	2.3	2.1

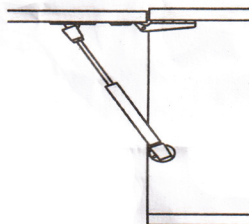

*When the door opening angle is 110°,
you can choose the load capacity as below:*

Load capacity (N)	Door height (mm) Door weight (kg)			
	300	400	500	600
60	1.6	1.2	0.9	0.8
80	2.1	1.6	1.2	1.0
100	2.6	1.9	1.6	1.3
120	3.1	2.3	1.9	1.6
150	3.5	2.6	2.2	1.9

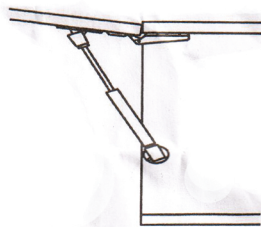

In normal pressure, gas spring should be used within the following temperature:

1. Maximum temperature can not exceed 45°C
2. Minimum temperature can not exceed minus 25°C