


DF

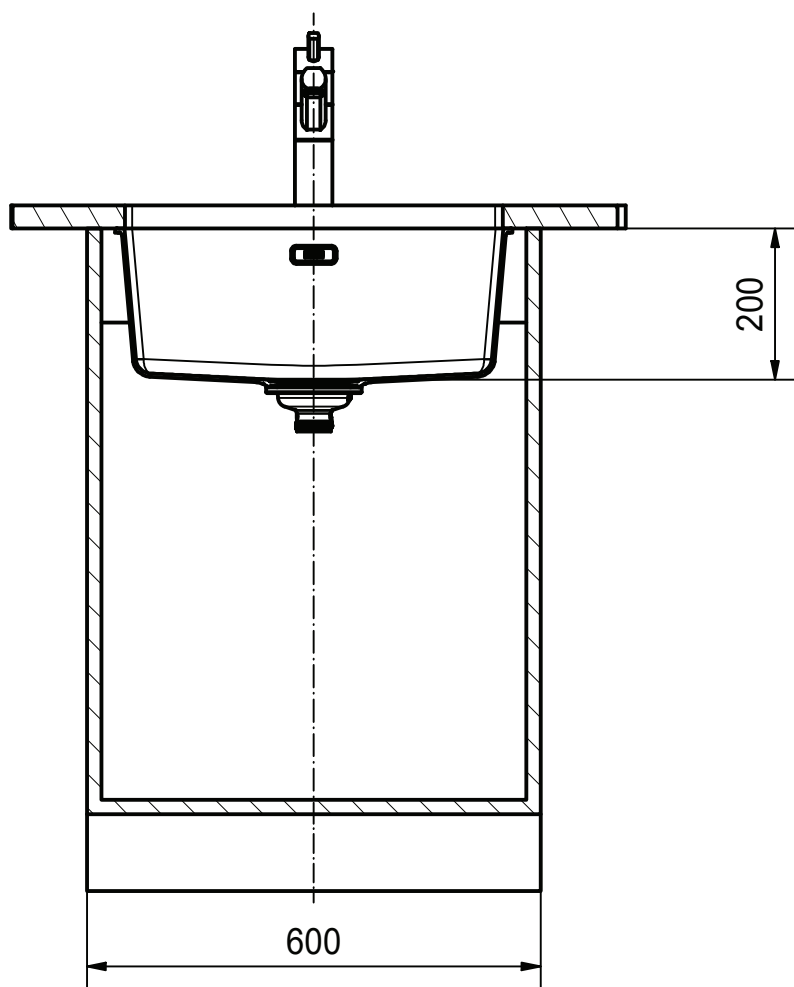


Drawing No.	20127705_03	Revision	A
Drawn Date	25.08.2017		

SID 110-50
installing document

Sheet	Sheets
1	7

DS

Pri montáži drezu odstráňte zadnú zvislú výstuhu skrinky.

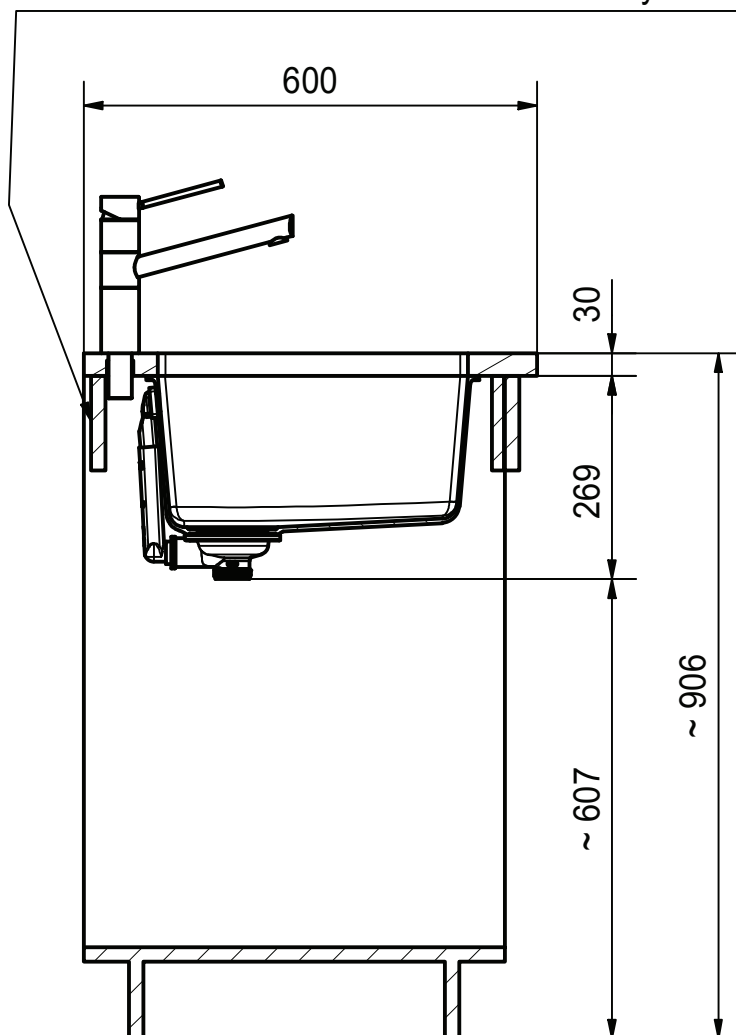


Drawing No.	20127705_03	Revision	A
Drawn Date	25.08.2017		

SID 110-50
installing document

Sheet	Sheets
2	7

CO

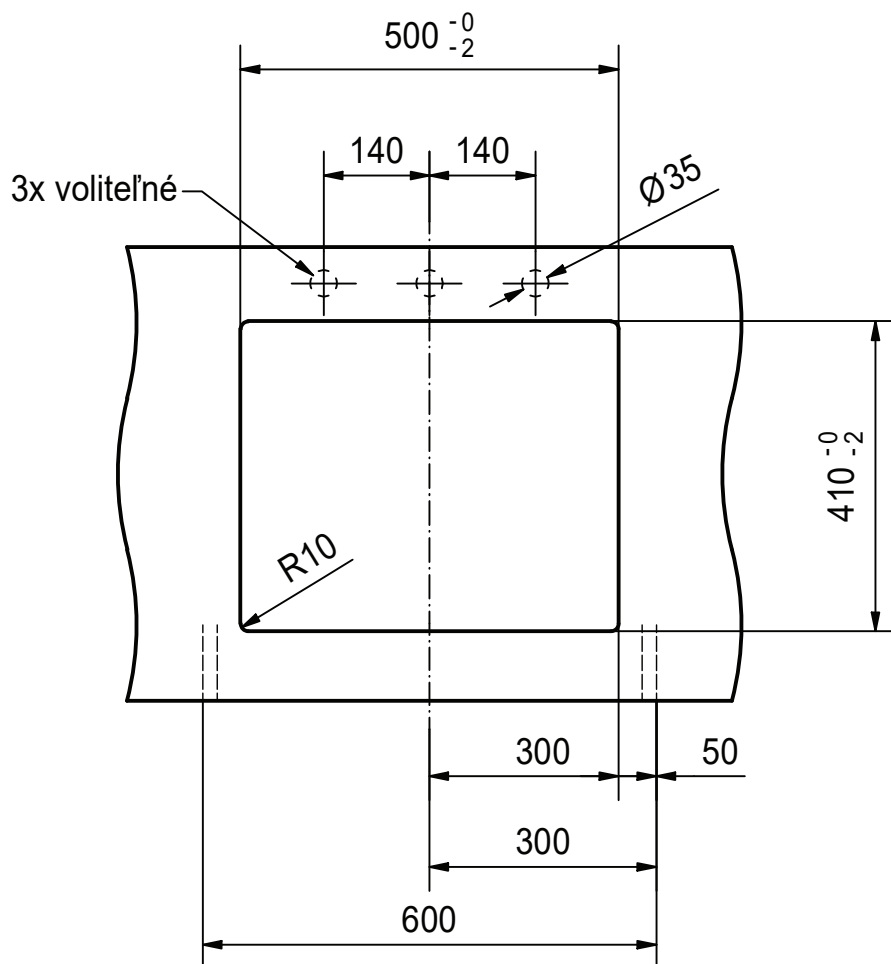

Drawing No.	20127705_03	Revision	A
Drawn Date	25.08.2017		

SID 110-50
installing document

Sheet	Sheets
3	7

CNC




Drawing No.	20127705_03	Revision	A
Drawn Date	25.08.2017		

SID 110-50
installing document

Sheet	Sheets
4	7

FP

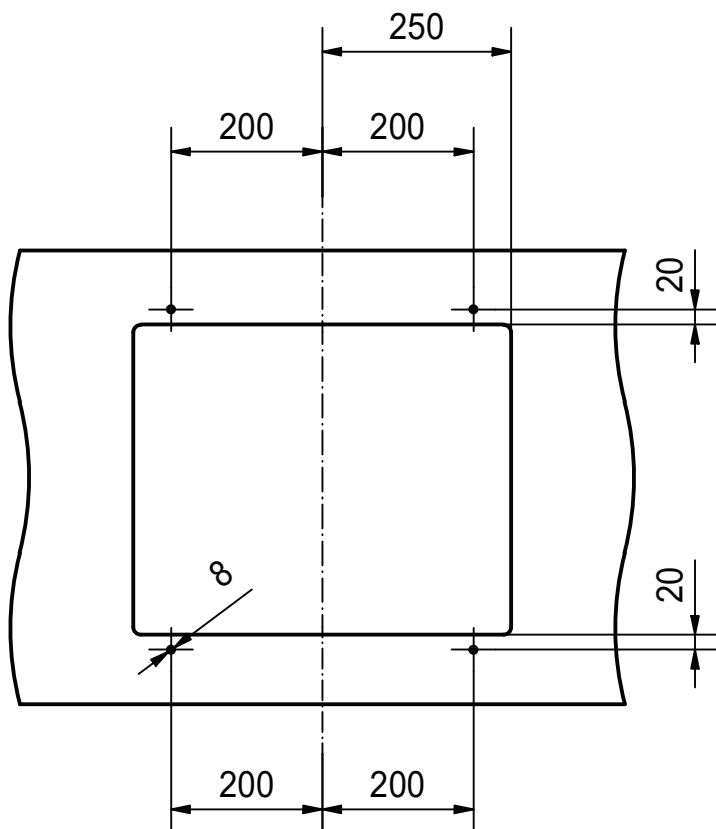


Drawing No.	20127705_03	Revision	A
Drawn Date	25.08.2017		

SID 110-50
installing document

Sheet	Sheets
5	7

DT

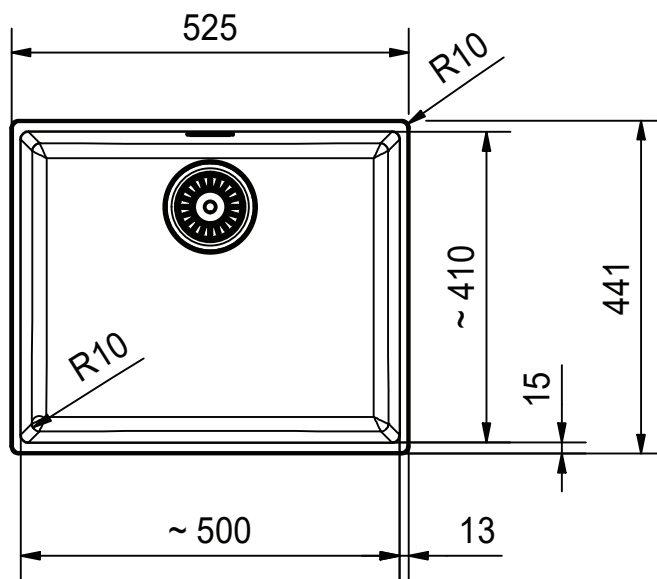


Drawing No.	20127705_03	Revision	A
Drawn Date	25.08.2017		

SID 110-50
installing document

Sheet	Sheets
6	7

ISO

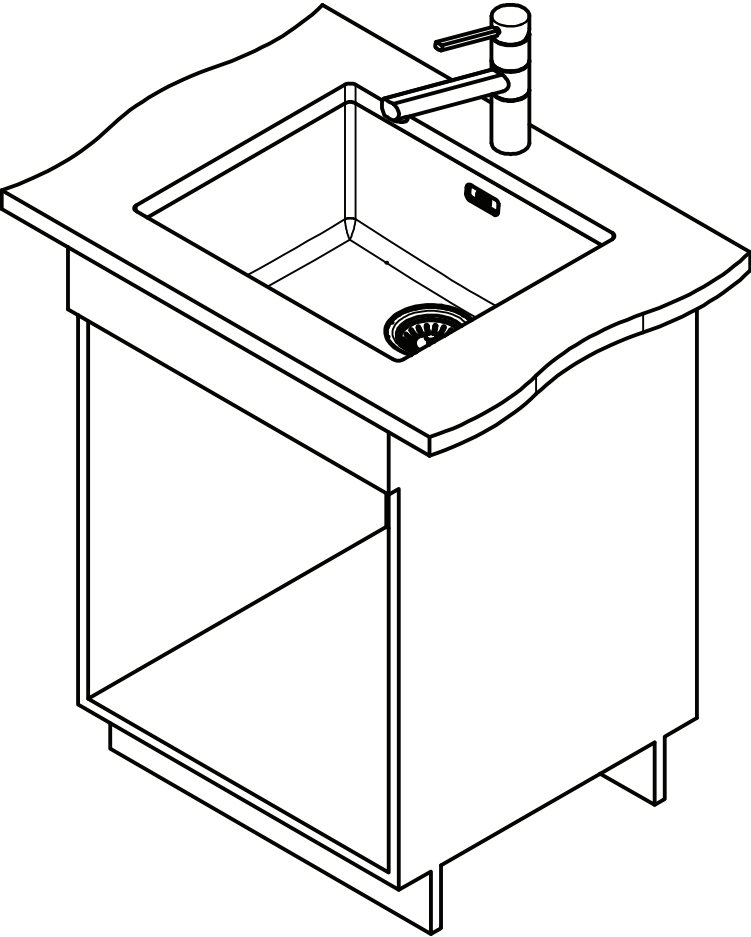

Drawing No.	20127705_03	Revision	A
Drawn Date	25.08.2017		

SID 110-50
installing document

Sheet	Sheets
7	7